

[Suggestion for operational improvement]

How to launch TELLUS and V-Server automatically at startup

Before

TELLUS and V-Server must be **manually** restarted after the PC restarts.




The monitor screen (TELLUS) is not displayed!
How do I start it?

I did not know there was a PC maintenance.
I wish it worked as it was automatically...

If the PC is set to start software automatically...

After

TELLUS and V-Server launch **automatically** at startup.

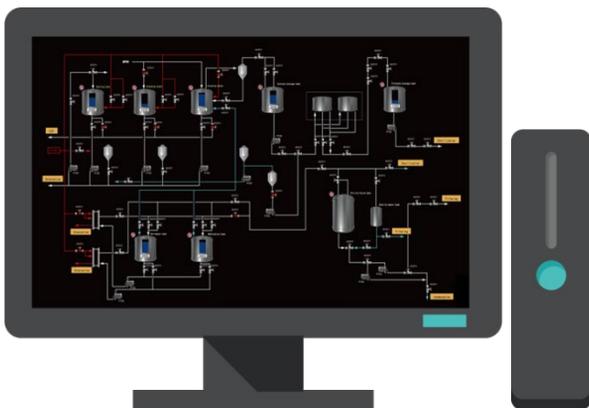

Don't worry about sudden PC maintenance or automatic OS updates!

I can avoid the risk!

Configuration of Settings

Just store the programs you wish to start in the startup folder on your PC!




The "HMI" shortcut
 The "Remote" shortcut




The "vserver.exe"
 shortcut

Just store them!

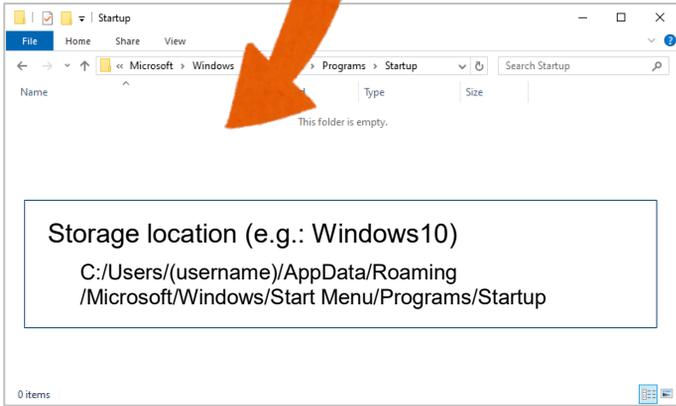

For TELLUS

Start TELLUS and create a shortcut of the starting program from [File] > [Create Shortcut]. Store it in the folder.

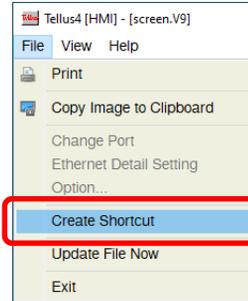


For V-Server

Store the shortcut of vserver.exe to the folder.

You can also start TELLUS and V-Server at any time using the Windows Task Scheduler.

• Administrative Tools > Task Scheduler

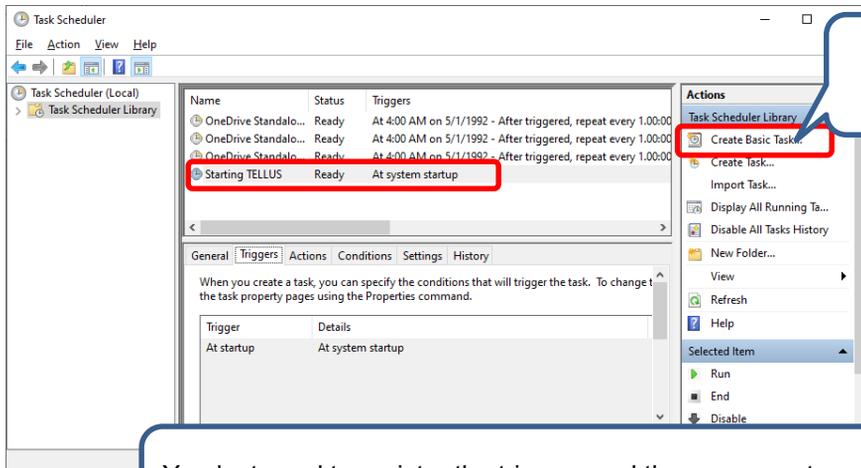

Click here to start the settings wizard to configure easily.

You just need to register the triggers and the programs to run!
 You can also set the time for the triggers.

