TELLUS and V-Server Lite

Issue No. 36 2013


TELLUS and V-Server Lite is now bundled in V-SFT-5 free of charge!


Experience the user-friendly remote monitoring of the TELLUS and V-Server Lite. TELLUS and V-Server Lite will reduce down-time and increase your operation efficiency.


Bundle with V-SFT-5 at no cost

The V-SFT-5 software for the TELLUS and V-Server Lite offers selected features from the official version of TELLUS and V-Server.

- *Supported with V-SFT Ver. 5.4.28.0 or later.
- *The V-SFT software is Fuji Electric's standard programming package for all of their HMIs.
- *Refer to back side for the list of supported features.

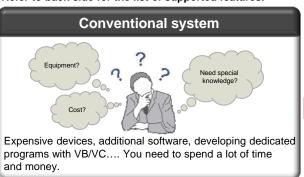


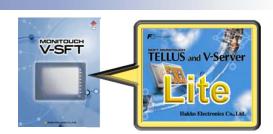

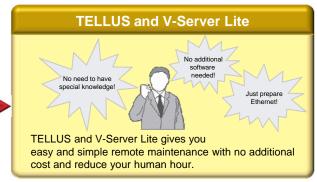

How to startup TELLUS and V-Server Lite

TELLUS and V-Server Lite software will be installed in an install folder named V-SFT V5. You can launch it from the Start menu in Microsoft Windows.

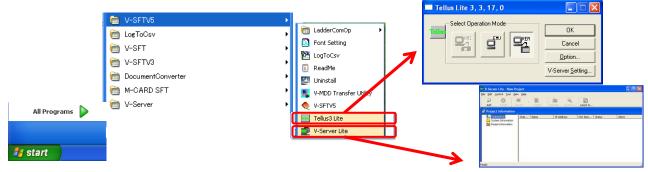

*For further details on this operation, please refer to the TELLUS and V-Server Lite manual.

V-SFT-5 software- Control Engineering's 2011 Engineers Choice Award Winner for HMI Programming Software!



TELLUS and V-Server Lite -Supported features-

The following selected features from the original version of the TELLUS and V-Server are available with the TELLUS and V-Server Lite.

	Features	TELLUS and V-Server Lite	TELLUS and V-Server (Original version)
TELLUS	HMI mode	N	Υ
	Remote mode	Υ	Υ
	Emulate mode	Υ	Υ
V-Server	System update	Υ	Υ
	Screen program transfer	Y	Y
	Alarm monitoring	N	Υ
	Memory read	N	Y
	Memory write	N	Υ
	Read sampling data	Υ	Υ
	Logging	N	Υ
	Tag	N	Υ
	CF card information	Υ	Υ
	Recipe data transfer	N	Y
	Event	N	Υ
	System information display	Υ	Υ
	Log viewer	Υ	Υ
	Remote monitor	Υ	Υ
	Access function (HKTAcs.dll)	N	Υ
Others	Access function (HKEth20.dll)	N	Υ
	SEND/MES macro commands	N	Υ

Trial version of the official TELLUS and V-Server software is available on our website.

You can experience the full features without a license. (The number of launches and runtime is limited.)

Free version upgrade of the configuration software V-SFT-5

You can update and download the V-SFT-5 configuration software from the website.

*Membership registration and first software purchase is required.

http://www.hakko-elec.co.jp/en/download/09vsft5/index.php#02